


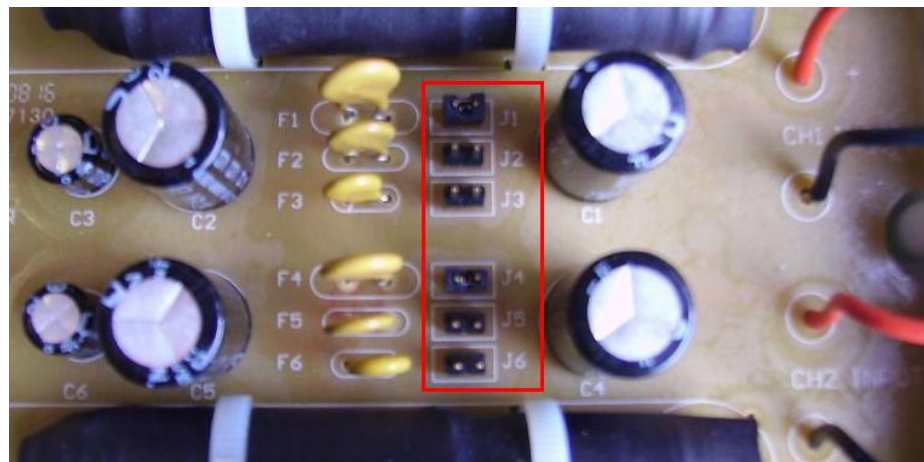

Internal Jumper Settings

The APU2 will be preset at the factory for use with the accompanying AIW loudspeaker. The correct model/models is shown on the underside of the APU2. If the installer wishes to use an APU2 for a different AIW model then this can be achieved by simply changing internal 'jumpers' within the unit itself.

Simply remove 4 screws on the underside of the unit to open the APU2. There are 3 jumpers per channel. Please see the following table of jumper setting for each AIWX speaker model.



AIW5X	-	J1 & J4
AIW3X & 4X	-	J2 & J5
AIW1X & 2X	-	J3 & J6